


About This Manual

- Button operations are indicated using the letters shown in the illustration. Keypad keys are indicated by their main keycap markings within square brackets in bold, such as [2].
- Each section of this manual provides you with the information you need to perform operations in each mode. Further details and technical information can be found in the "Reference" section.

Keypad

General Guide

- Press B to change from mode to mode.
- In any mode, press L to illuminate the display.

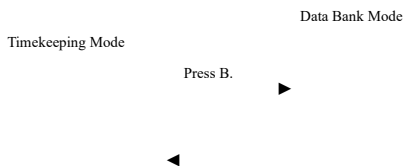

Calculator Mode

Alarm Mode



Dual Time Mode

Stopwatch Mode



Timekeeping

Hour : Minutes  
Day of week      Seconds

Use the Timekeeping Mode to set the time and date. You can also view the Dual Time Mode screen or Data Bank Mode screen from the Timekeeping Mode.

Note

This watch is capable of displaying text for the day of the week in any one of 13 different languages (English, Portuguese, Spanish, French, Dutch, Danish, German, Italian, Swedish, Polish, Romanian, Turkish, and Russian).

Year Month-Day  
PM indicator

To set the time and date  
Language indicator



1. In the Timekeeping Mode, hold down A until the seconds digits start to flash. This is the setting screen.
2. Use C and B to move the flashing in the sequence shown below to select other settings.

Press C. Press B.

Seconds Year Month Day

Minutes Hour Language

- The currently selected language indicator flashes on the display while the Language setting is selected in the above sequence.
3. When the setting you want to change is flashing, use the keypad to change it as described below.
    - You must input two digits for the hour, minutes, year, month, and day settings. If you want to specify 3 o'clock, for example, input 03 for the hour. For the year setting, input the two rightmost digits.

To do this:

Reset the seconds to 00  
Change the year, month, day, hour, or minutes

Do this:

- Press [0].
- Input values on the keypad keys.
- The flashing moves to the right each time you input a value.
- While the hour or minutes is flashing (12-hour timekeeping only), press [=PM] to toggle between AM (A indicator) and PM (P indicator).

Change the language

Use [+] and [-].

- While the language indicator is flashing on the display, use [+] and [-] to cycle through the language indicators as shown below until the one for the language you want to select is displayed.

[+]	Indicator Language	Indicator Language	Indicator Language
	ENx English	DAN Danish	RO Romanian
	POR Portuguese	DEU German	TJR Turkish
	ESP Spanish	ITA Italian	PUC Russian
	FRA French	SVE Swedish	
[-]	NED Dutch	POL Polish	

4. Press A to exit the setting screen.
  - The day of the week is automatically displayed in accordance with the date (year, month, and day) settings.
  - See the "Day of the Week List" for information on abbreviations used.
  - In addition to the day of the week display, the language setting also affects the type of characters you can input for the name in the Data Bank Mode.
  - Holding down A in the Timekeeping Mode displays the indicator for the currently selected language. Keeping A depressed for one second changes to the Timekeeping Mode setting screen (indicated by the flashing seconds digits). If you accidentally display the setting screen, press A again to exit.

To toggle between 12-hour and 24-hour timekeeping

In the Timekeeping Mode, press C to toggle between 12-hour timekeeping (indicated by A or P on the display), or 24-hour timekeeping.

- With the 12-hour format, the P (PM) indicator appears on the display for times in the range of noon to 11:59 p.m. and the A (AM) indicator appears for times in the range of midnight to 11:59 a.m.
- With the 24-hour format, times are displayed in the range of 0:00 to 23:59, without any indicator.
- The 12-hour/24-hour timekeeping format you select in the Timekeeping Mode is applied in all modes.

Daylight Saving Time (DST)

Daylight Saving Time (summer time) advances the time setting by one hour from Standard Time. Remember that not all countries or even local areas use Daylight Saving Time.

To toggle the Timekeeping Mode time between DST and Standard Time

Holding down C for about two seconds in the Timekeeping Mode toggles between Daylight Saving Time (DST displayed) and Standard Time (DST not displayed).

- Note that pressing C in the Timekeeping Mode also toggles between 12-hour timekeeping and 24-hour timekeeping.
- The DST indicator appears on the Timekeeping and Alarm Mode displays to indicate that Daylight Saving Time is turned on.

To display the Dual Time screen and Data Bank screen in the Timekeeping Mode

Holding down [=] in the Timekeeping Mode displays the Dual Time screen. Holding down [=] displays the record you were viewing when you last used the Data Bank Mode.

Hold down [=] Hold down [=]

Dual Time Screen Data Bank Screen

Data Bank

Remaining number of records

Name

Telephone number

The Data Bank Mode lets you store up to 25 records, each containing name and telephone number data. Records are automatically sorted based on the characters of the name. You can recall records by scrolling through them on the display.

- The characters you can input for the name depend on the language you select in the Timekeeping Mode. See "To set the time and date" for more information. Changing the language setting does not affect names that are already stored.
- All of the operations in this section are performed in the Data Bank Mode, which you enter by pressing B.
- Holding down [=PM] in the Data Bank Mode displays the number of remaining records.

Creating a New Data Bank record

When creating a new Data Bank record, you can input the name and then the telephone number, or you can input the telephone number and then the name. Being able to input the phone number first helps to avoid forgetting a number as you input the name.



